



Centec Paramount (Barndoor) Installation Guide

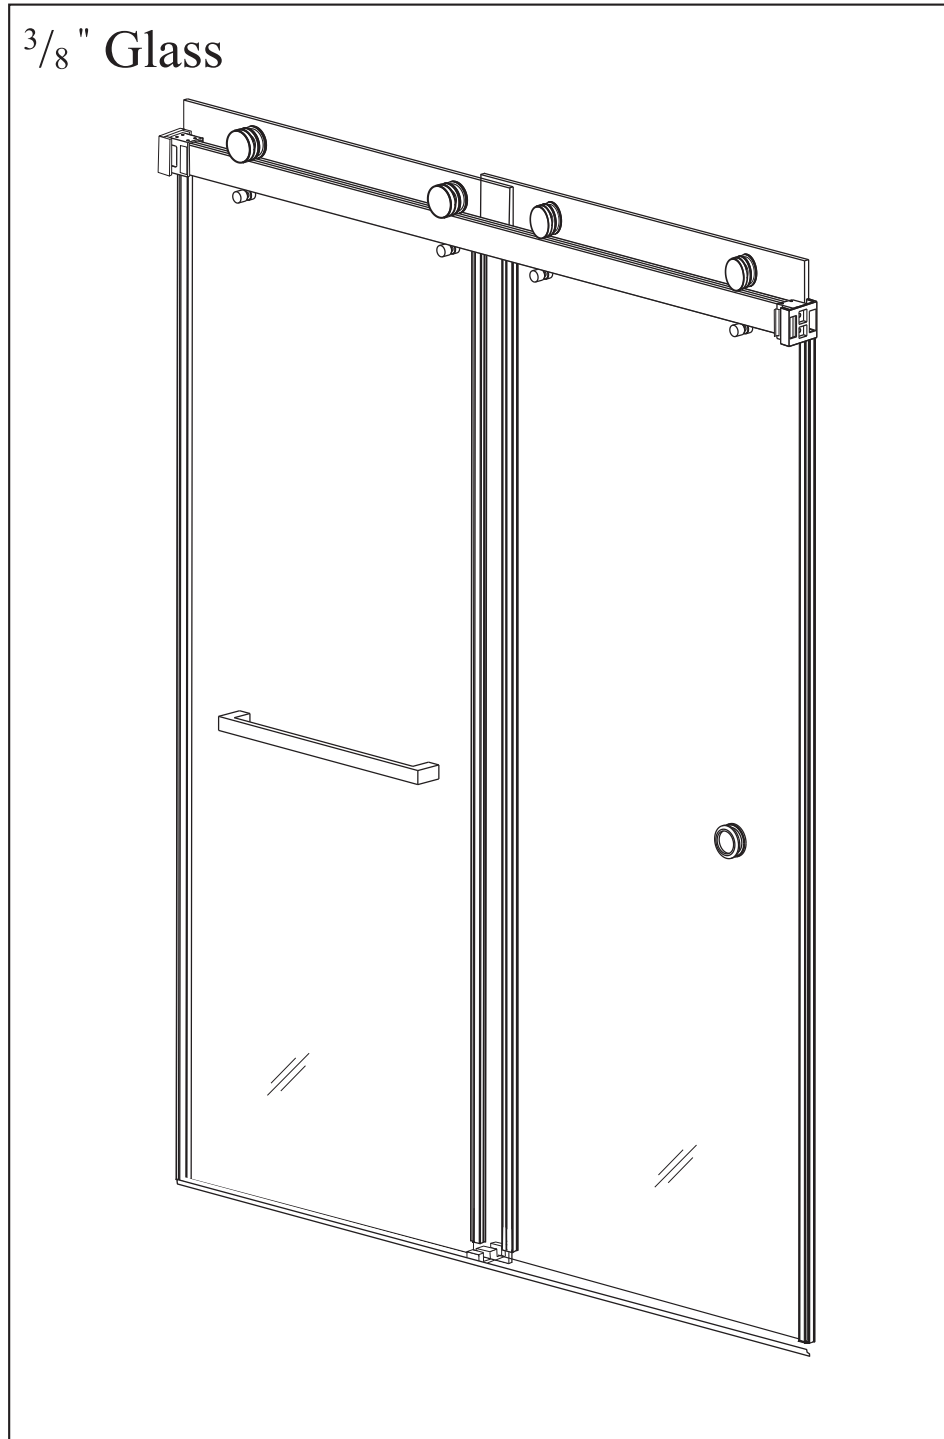

Detailed diagram of Paramount components


#	Part Name	Qty
1	Roller	4
2	Wall anchor	4
3	Screws 5 x 45	4
4	Anti-lift guides	4
5	Plastic seal	4
6	Left side sliding door	1
7	Threshold	1
8	Bottom guide cover	1
9	Screws 14 x 30	1
10	Wall anchor	1
11	Bottom guide	1
12	Header bar	1
13	Rubber cushion	4
14	Track holder	2
15	Wall mount bracket	2
16	Right side sliding door	1
<i>(handle options)</i>		
17	*Handle	2
18	*Towel bar	2
19	*Cup Handle	2
20	*Finger pull	2

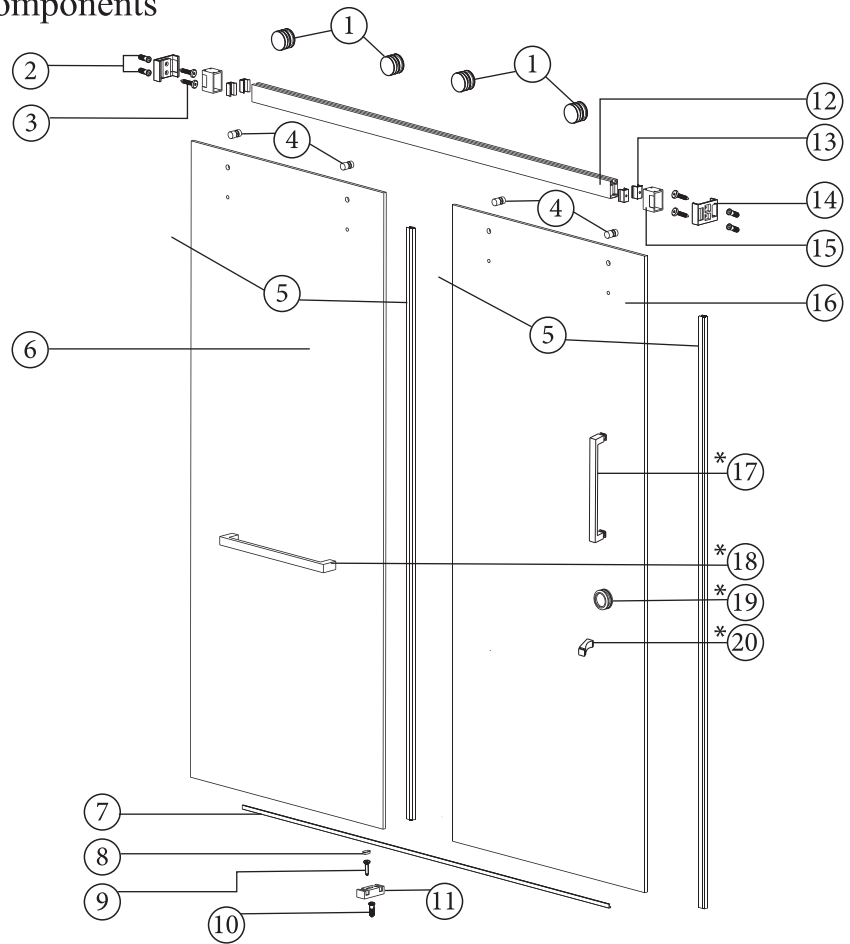

Rollers
(4)



Cup Handle
(2)




Threshold
(1)



Rubber Cushion
(4)




Wall Bracket
(2)

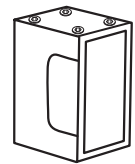

Header Bracket
(2)



Anti-Lift Guides
(4)

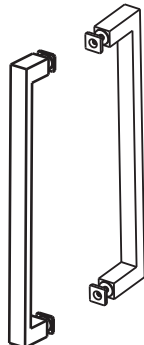

C Handles
(2)



Plastic Seal
(2)




Wall Anchors
(8)



Bottom Cover




Screws
(8)

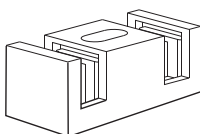


Bottom Guide
(1)



Finger pull handle
(2)

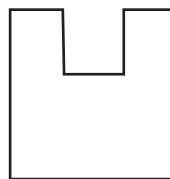


Header Bar
(1)

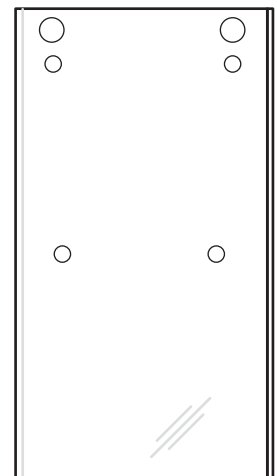


Sliding Door
(2)


Tools required

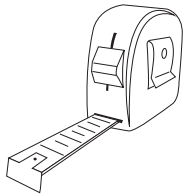


Tape Measure



Level

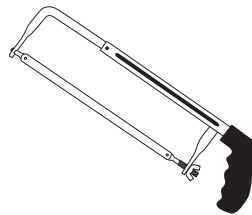

Hacksaw
(or Chopsaw w/metal blade)

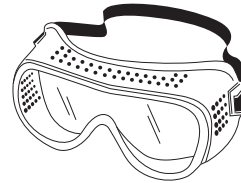


Safety glasses




Pencil/Marker




Drill bit
3/16" carbide masonry bit,

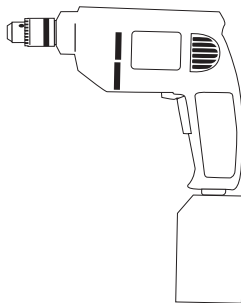


Drill

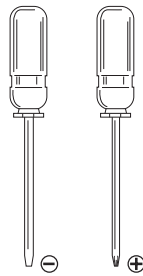

Flat and Phillips
head Screwdrivers

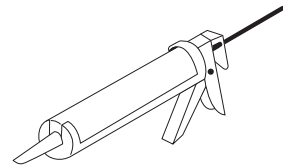


Caulk gun



Allen wrench




Piece of carpet/ padding

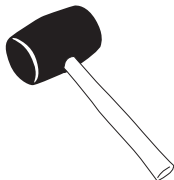


Rubber mallet




Masking tape

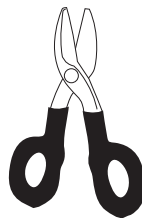

Scissors

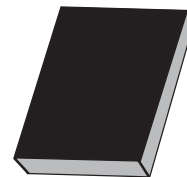

Glazing block/
piece of wood (2"x 4")

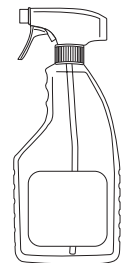


Glass cleaner



WARNINGS

- **Before starting, please read instructions carefully and thoroughly; then proceed step by step.
- **Please wear safety glasses and safety gloves whenever drilling or cutting tile or handling metal/glass parts.
- **When drilling through tile, carefully break through glazed surface only with sharp tool and then drill slowly.
- **Wall uprights must be installed level and plumb. Do not follow grout lines.
- **To insure complete customer satisfaction Century Bathworks recommends installation by a professional.
- **Risk of injury or product damage. Two people should perform this installation.
- **Do not cut the top and bottom track the same length for this installation.
- **Please carefully unpack all parts for your unit as listed on previous page and also check that you have all the tools as listed above.
- **If any parts are missing or damaged, please contact Century Bathworks or your dealer for replacements.

DRILLING GUIDE

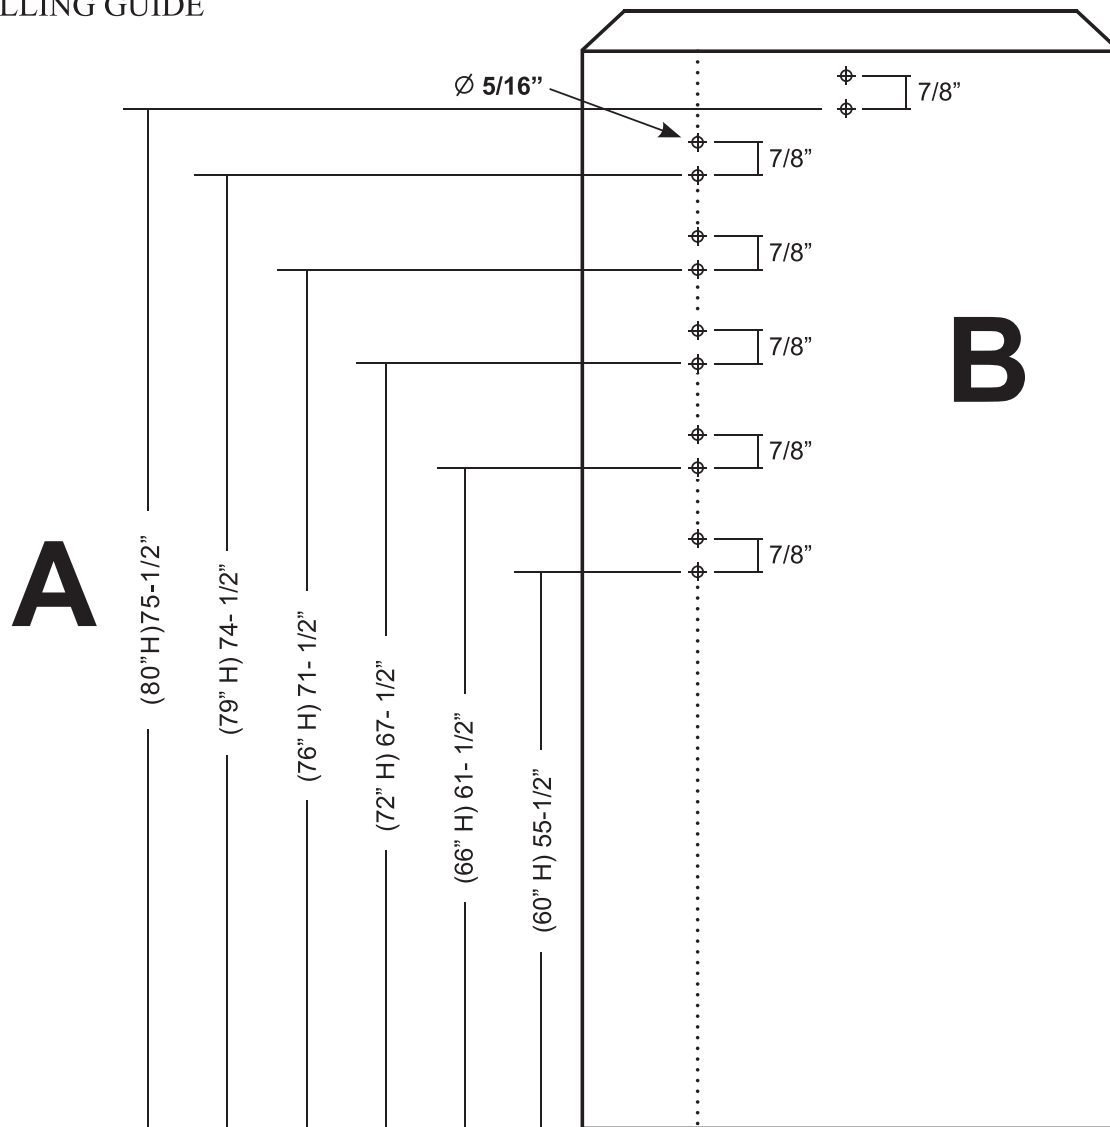

Product Height	A	B
60" (1524mm)	55 1/2" (1411mm)	7/8" (22mm)
66" (1676mm)	61 1/2" (1563mm)	
72" (1828mm)	67 1/2" (1716mm)	
76" (1930mm)	71 1/2" (1817mm)	
79" (2006mm)	74 1/2" (1894mm)	
80" (2032mm)	75 1/2" (1919mm)	



*A=Floor to First Hole

*Please contact your local dealer if the size is not listed.


ATTENTION

Please verify the measurements with a tape measure before drilling any holes in the wall.


1 INSTALLATION OF UPPER HORIZONTAL HEADER

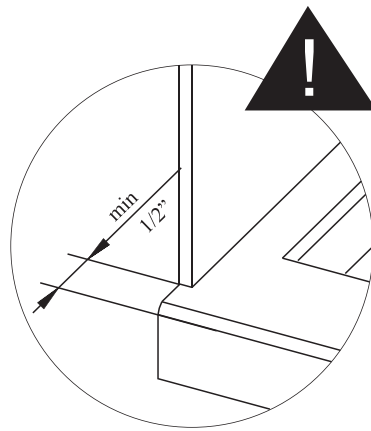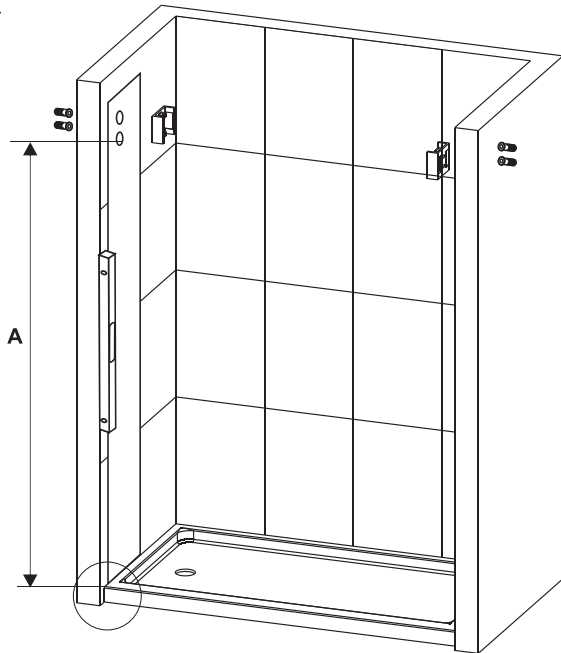


*A=product height - (4 1/2")

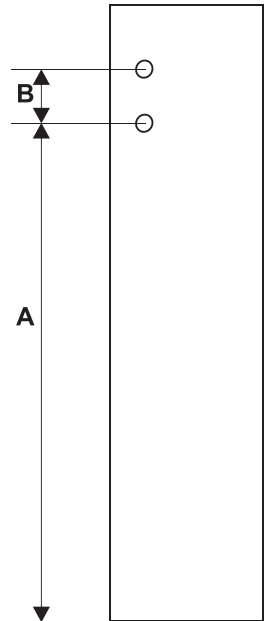


2

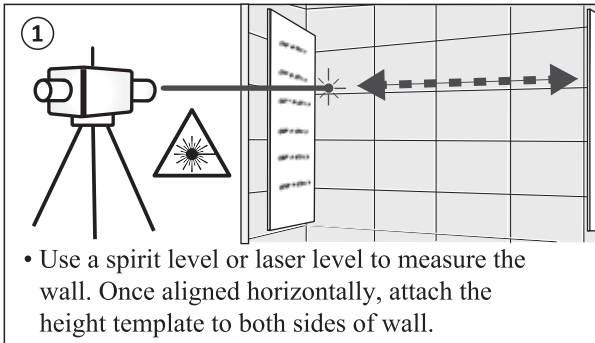


- Use a spirit level or laser level to measure the wall. Once aligned horizontally, attach the height template to both sides of wall.

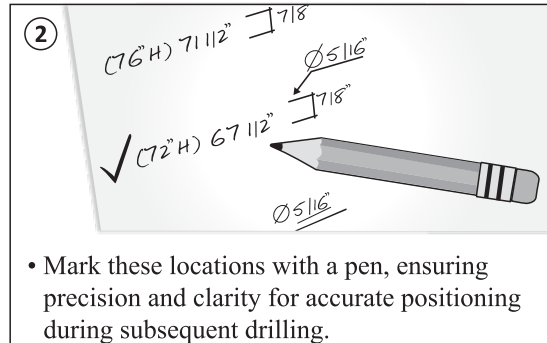


- Mark these locations with a pen, ensuring precision and clarity for accurate positioning during subsequent drilling.

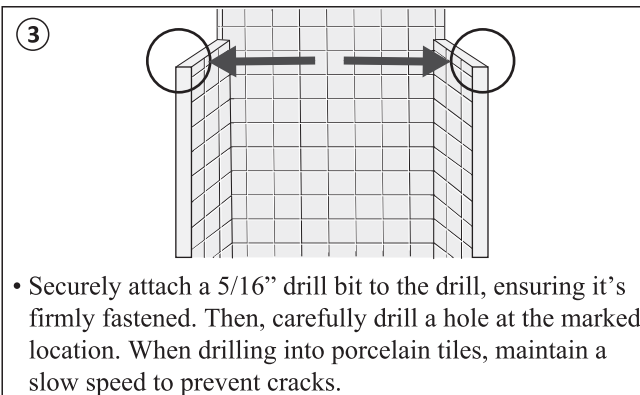


- Securely attach a 5/16" drill bit to the drill, ensuring it's firmly fastened. Then, carefully drill a hole at the marked location. When drilling into porcelain tiles, maintain a slow speed to prevent cracks.

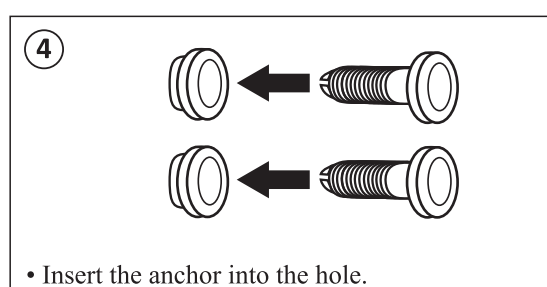

- Insert the anchor into the hole.

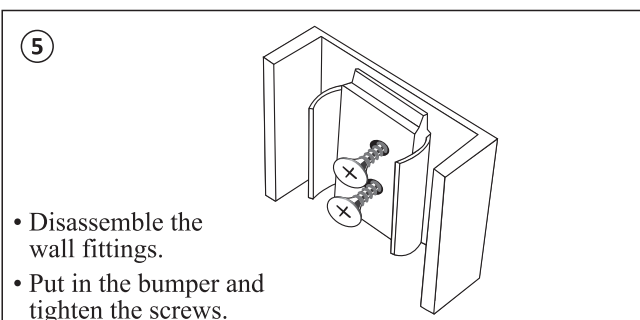

- Disassemble the wall fittings.
- Put in the bumper and tighten the screws.

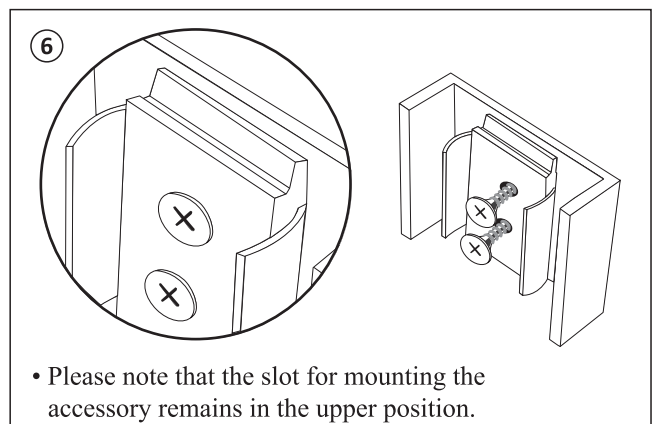


- Please note that the slot for mounting the accessory remains in the upper position.







3

REMINDER

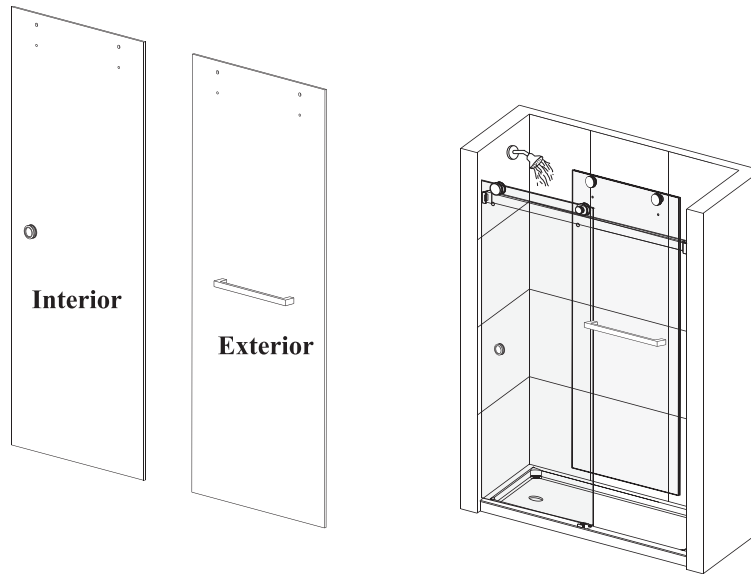

- Place the finger pull glass on the **INSIDE** of the shower enclosure where the shower head is located, and place the towel bar glass on the **OUTSIDE** of the enclosure.


4 **INSTALLATION OF PULLEY FITTINGS**

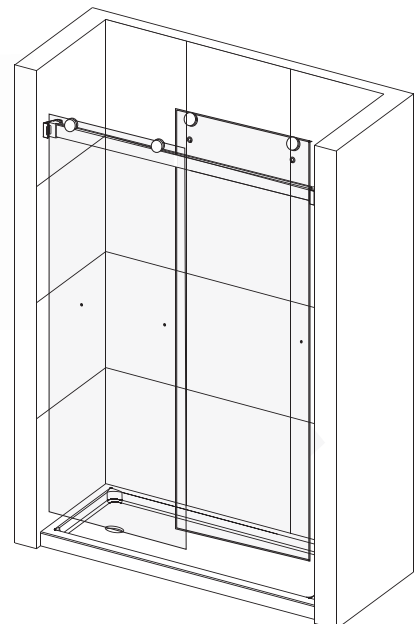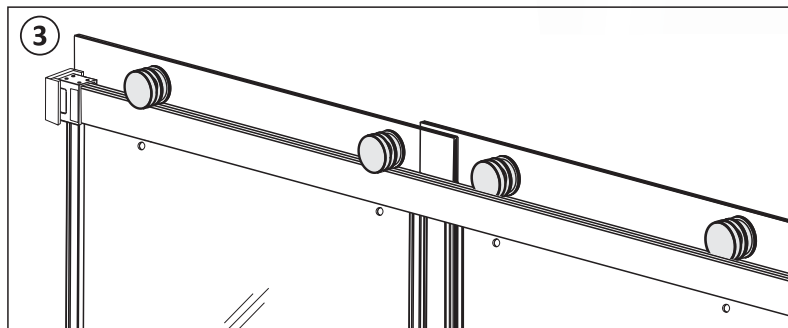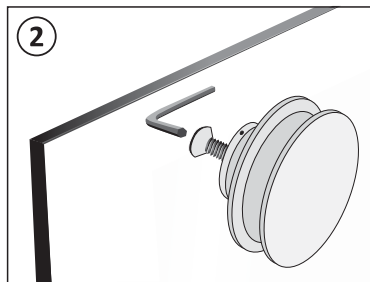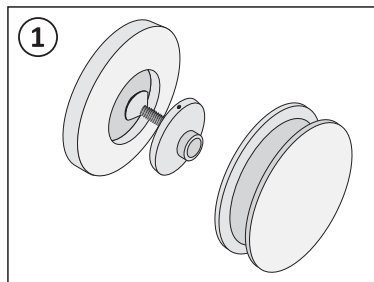

- Disassembly of pulley fittings.
- Place the pulleys in the correct order on the holes in the glass door, after tightening the pulleys using the screws and placing the inner glass inside. Please use a mat or soft cloth on the placement area to protect the door and floor.




5 INSTALLATION OF BOTTOM RETAINER

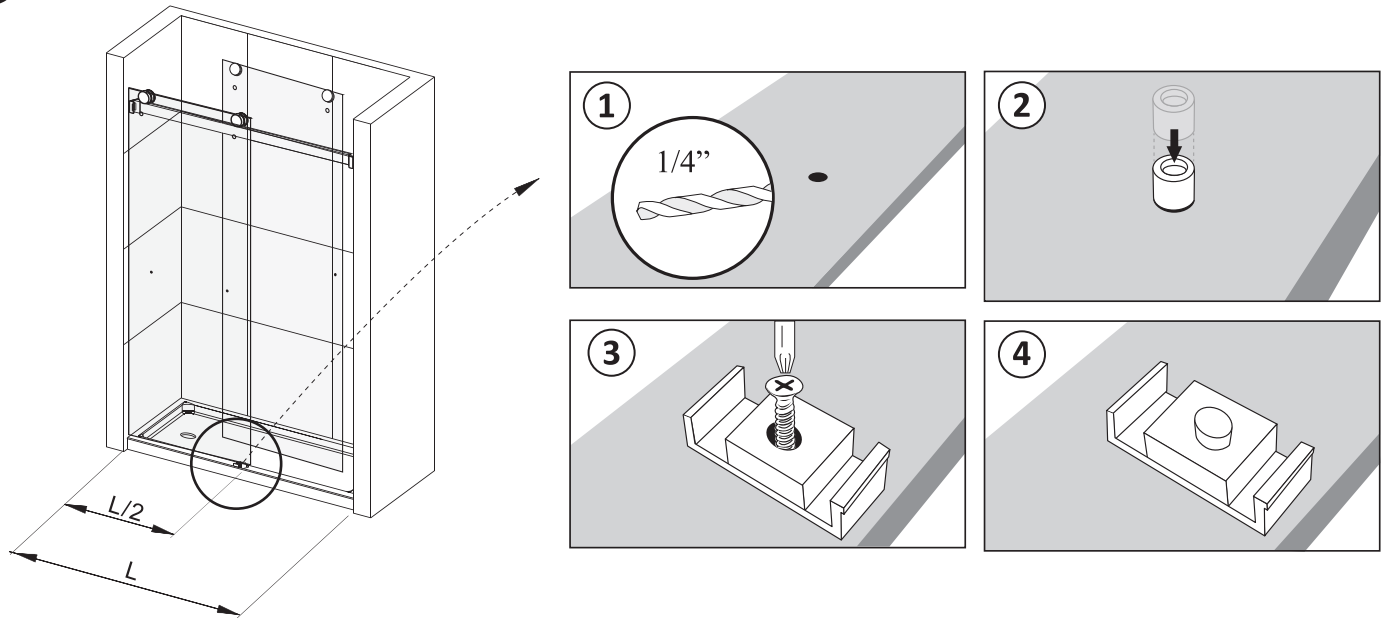


- Secure the glass to the track first to ensure accurate installation of the bottom guide.
- After confirming the position of $L/2$, place the bottom retainer in the middle position, measure with a level and make sure the glass is in horizontal and vertical level, then mark with a marker.
- Drill the holes using a 1/4" drill bit, insert anchors in the holes, tighten the bottom retainer with screws and close the decorative cover to complete the installation.

6 INSTALLATION OF THE GLASS DOOR

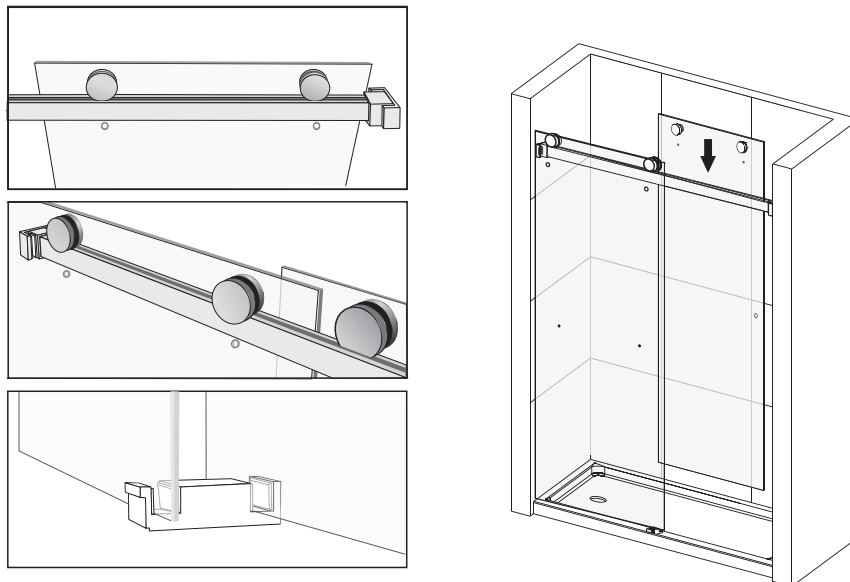



- When installing the glass sliding door onto the sliding track, make sure that both wheels are correctly fitted to the sliding track and the glass is correctly fitted into the bottom fixer slot. Gently push the glass to check that it is sliding smoothly and also to ensure that it can be used safely.

7 THE CORRECT METHOD OF INSTALLING GLASS

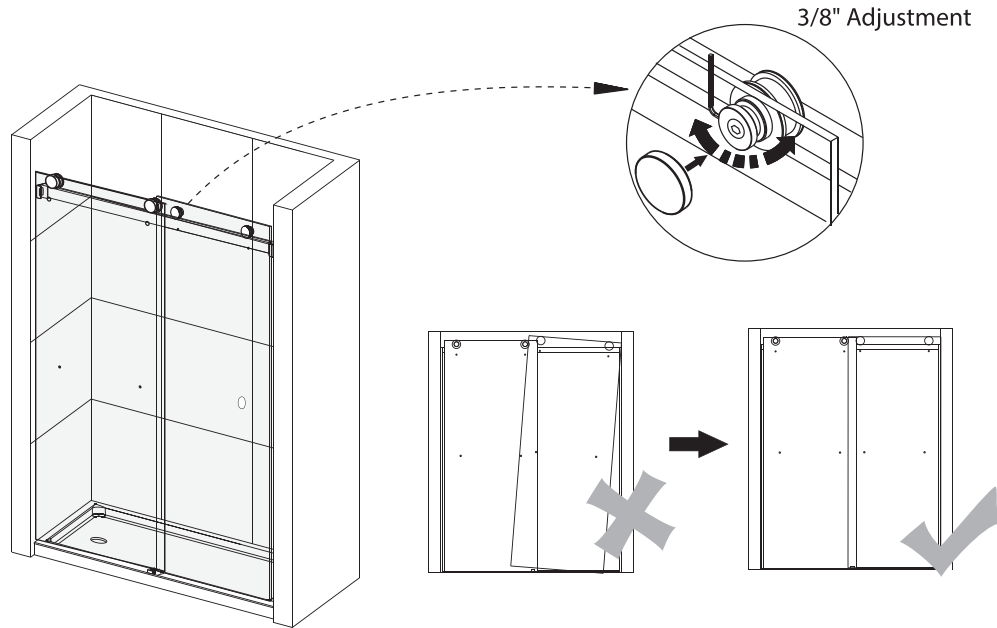


- If you notice that the glass is not level at the top and bottom, adjust the eccentric screw on the wheels to ensure the glass is level.

8 INSTALLATION OF ANTI-LIFT GUIDES

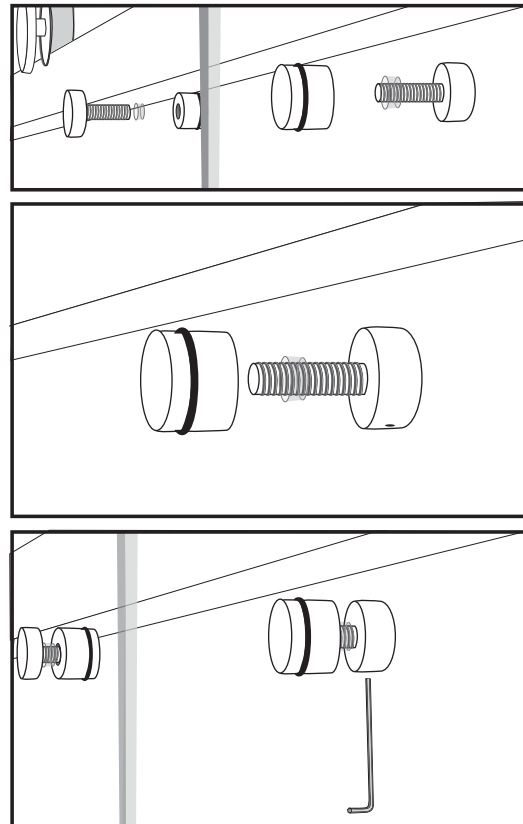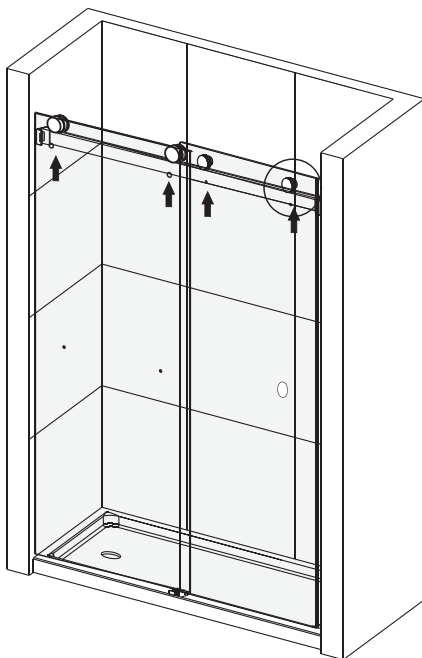


- After ensuring the glass is level, install anti-lift guides to prevent the glass from accidentally falling and causing injury.

9 INSTALL PLASTIC SEAL ALONG THE EDGES OF BOTH GLASS PANELS



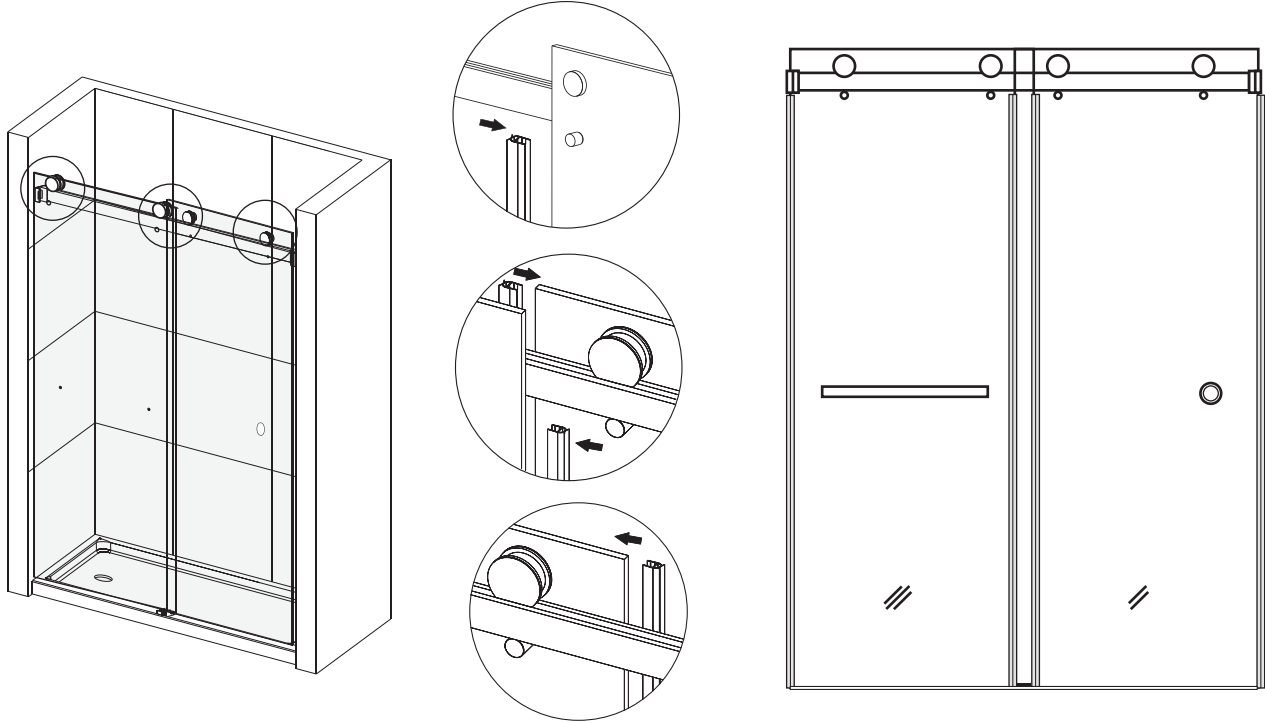


10 INSTALLATION OF TOWEL BAR AND KNOB

Towel bar installs on outside





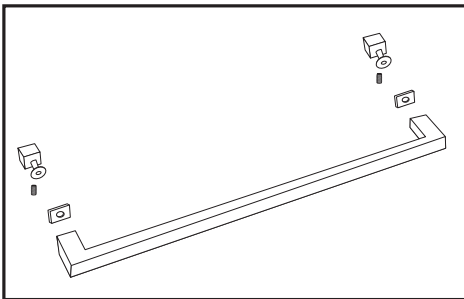


Knob installs on inside

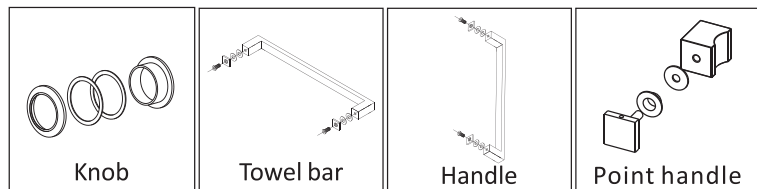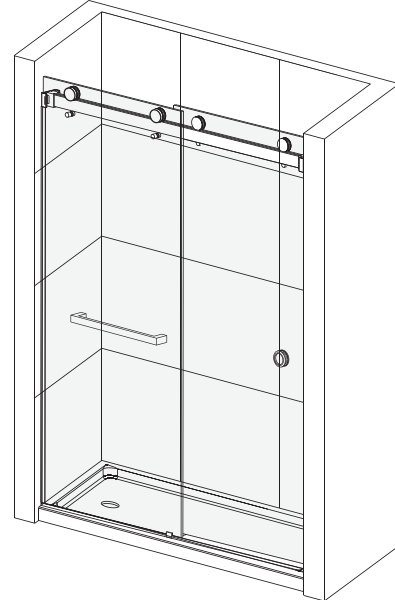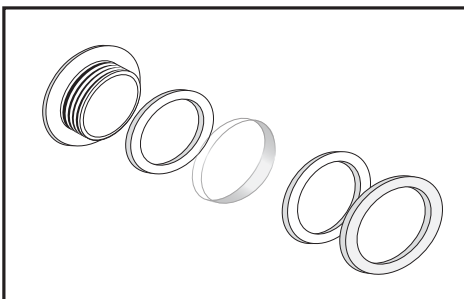

Warning: Risk of **SERIOUS INJURY**. Do **NOT** install the towel bar, handle, or knob before the door is fully mounted. Lifting the door using these components can cause the door to shatter, results in severe injury.

11 INSTALLATION OF THE WATER STOPPER IN THE BOTTOM FIXTURE RECESS

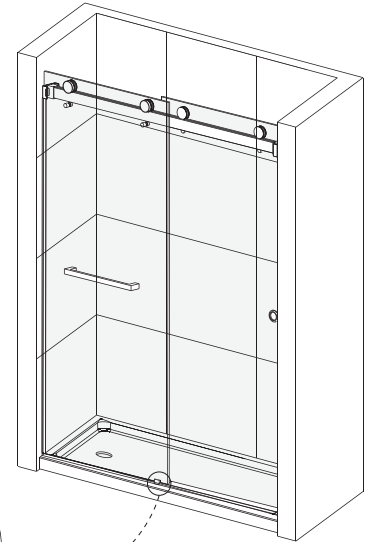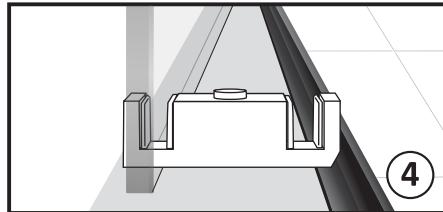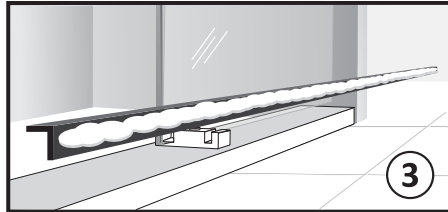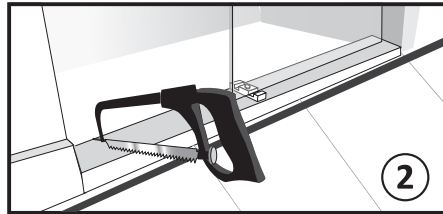
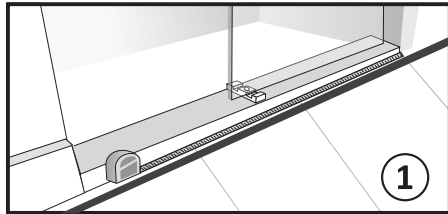


*Measure the desired length and use a saw to cut the threshold to the correct size. Ensure the edges are smooth and flat.

*To ensure the threshold functions properly, apply glass adhesive to fill the bottom gap completely. Covering the entire bottom surface.

*Install the water stopper in the bottom fixture recess and finish the installation by applying glass adhesive around the edges.

12

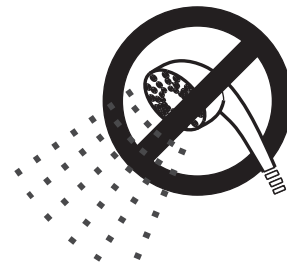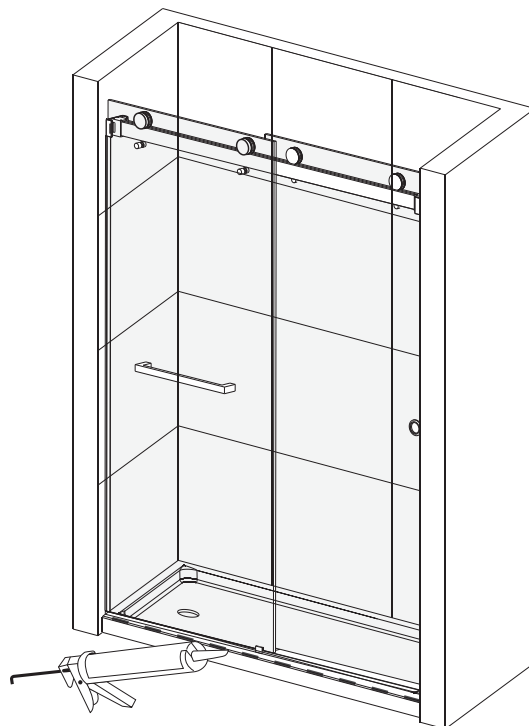

24 HOURS

* Wait 24 hours for the glass adhesive to cure.